



XPlotter Assembly Manual


Version 1.0

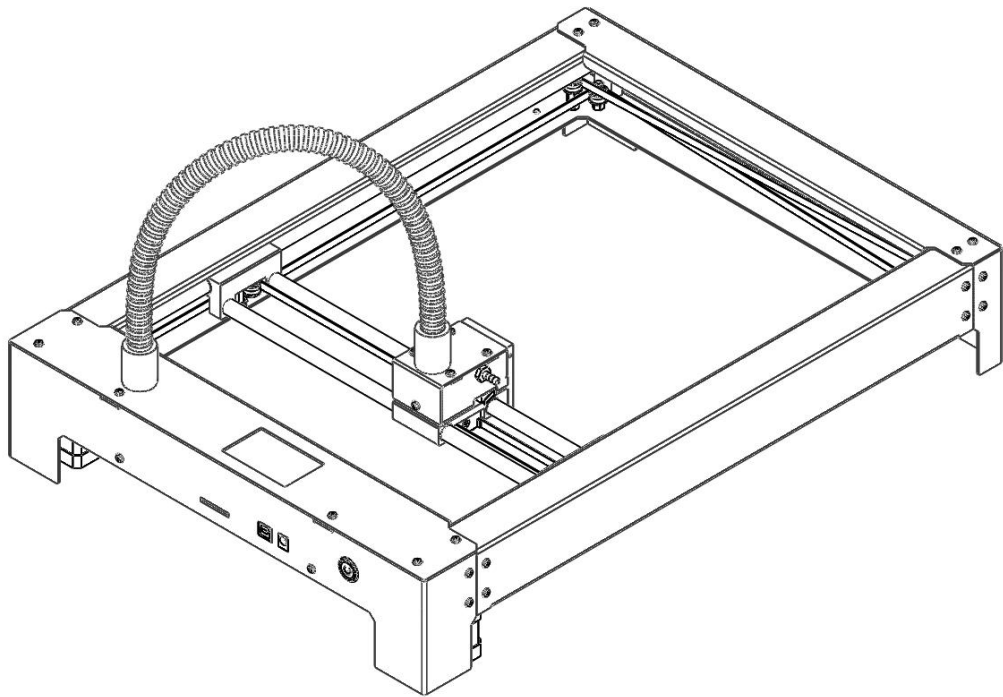


1、

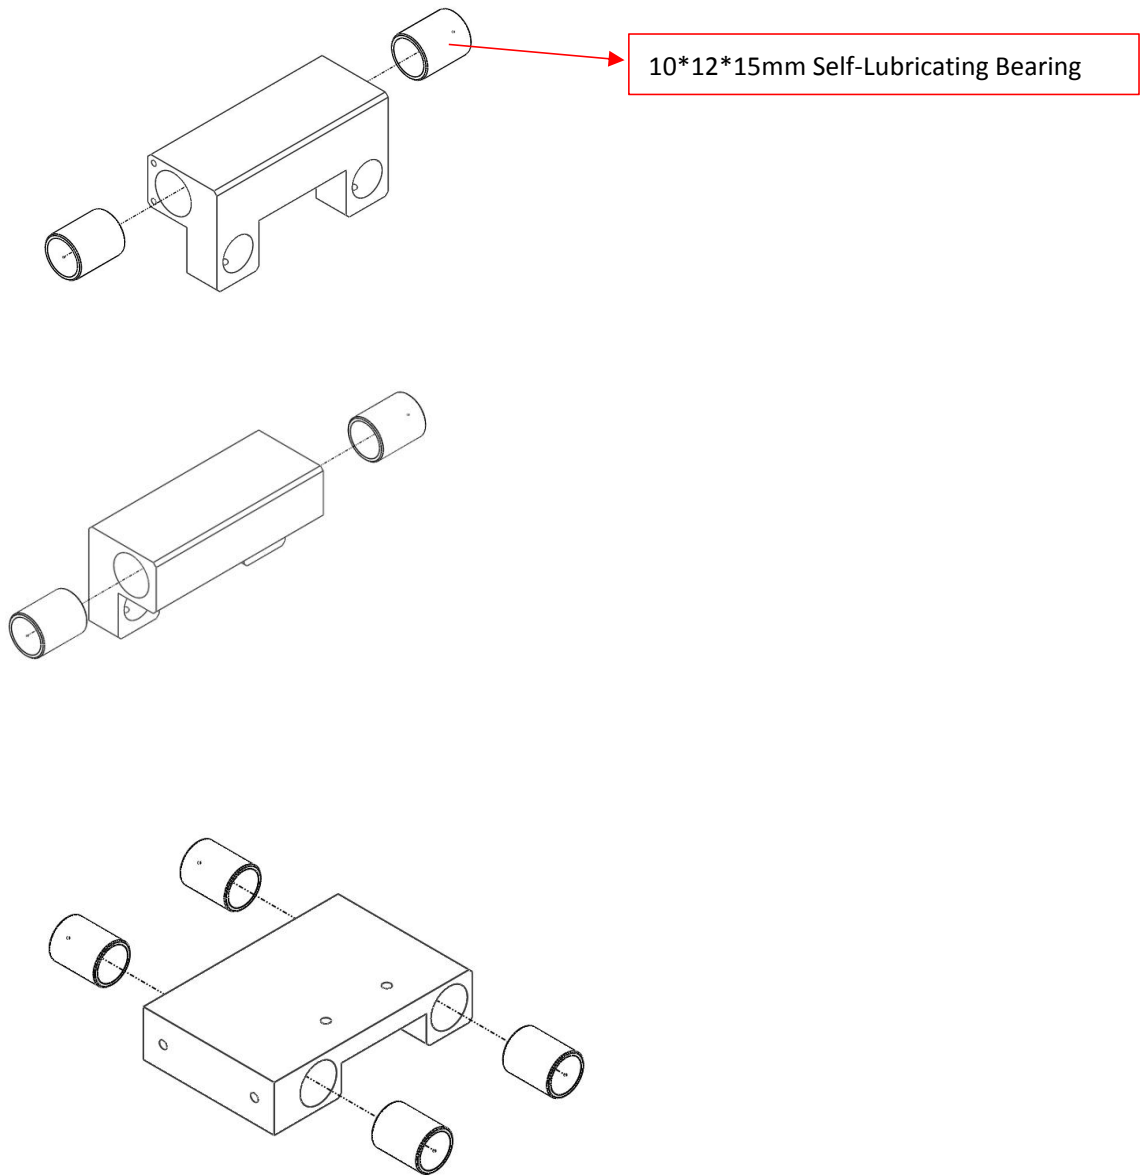

2、

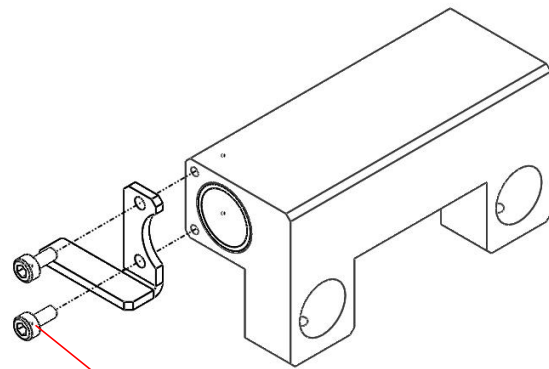

5mm M2 Allen Screw

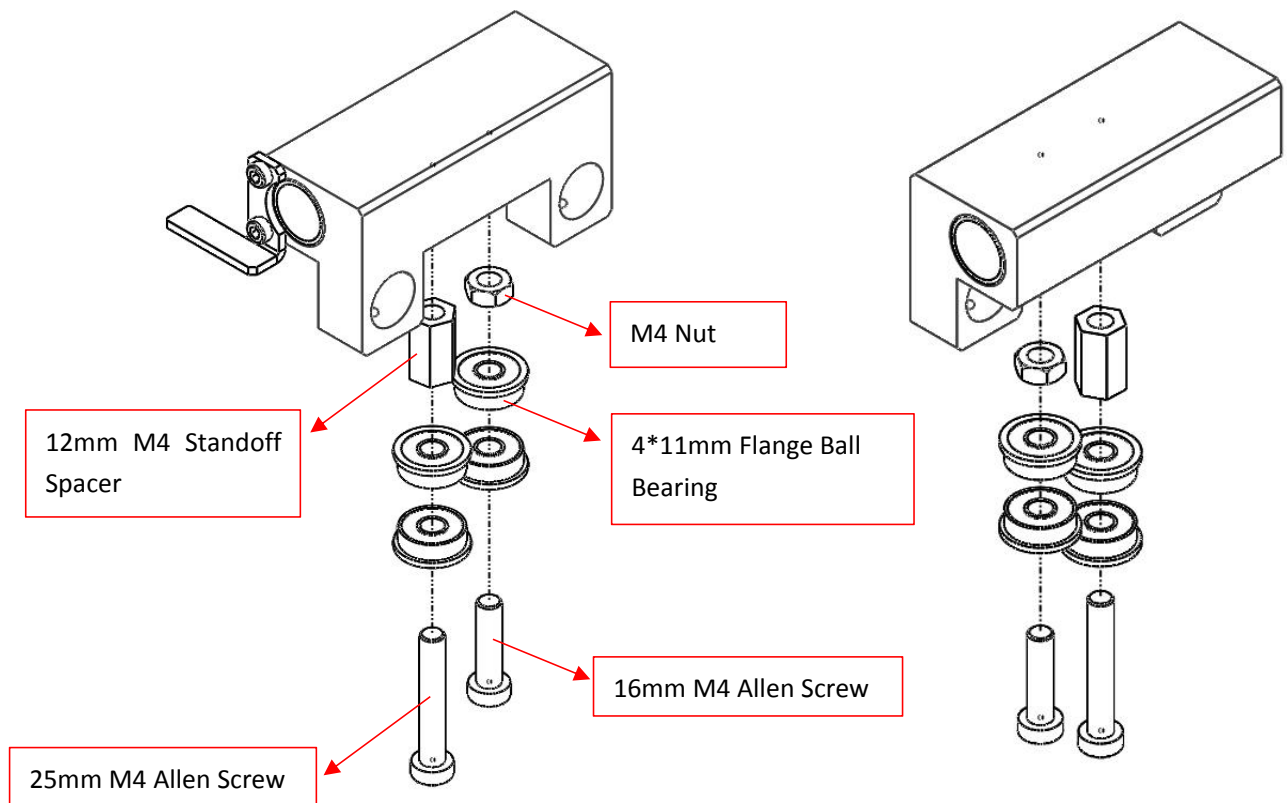

12mm M4 Standoff
Spacer





M4 Nut

4*11mm Flange Ball
Bearing


16mm M4 Allen Screw

25mm M4 Allen Screw


3、

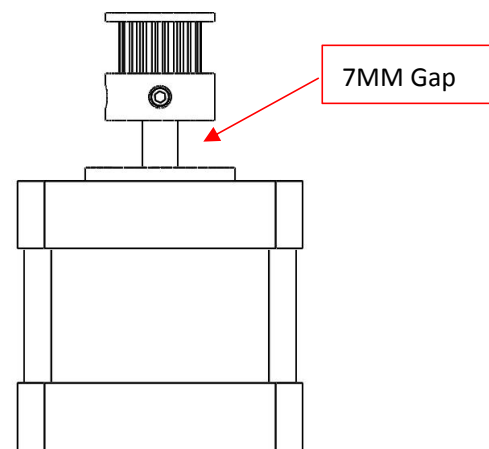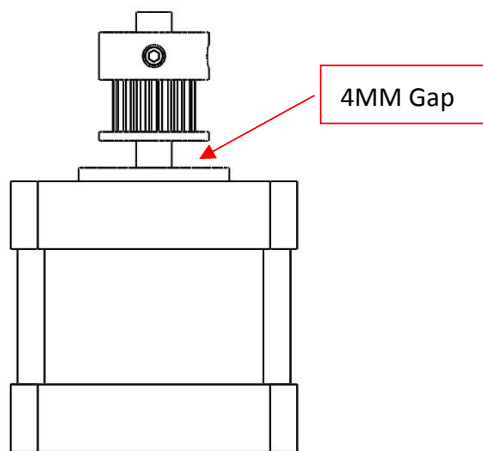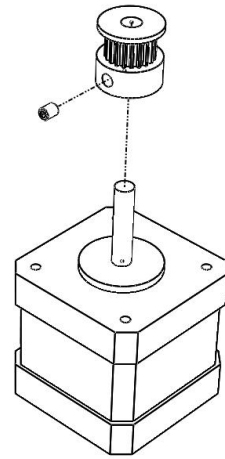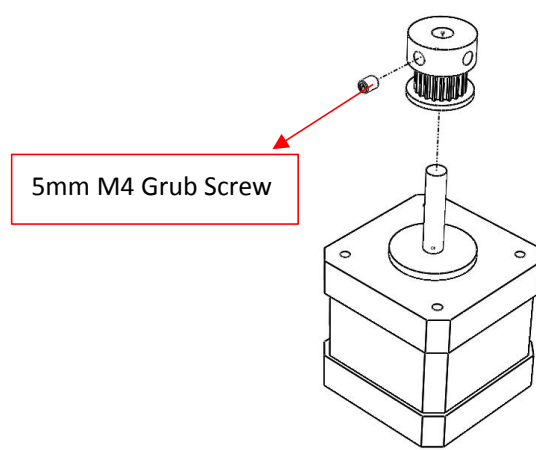



4、

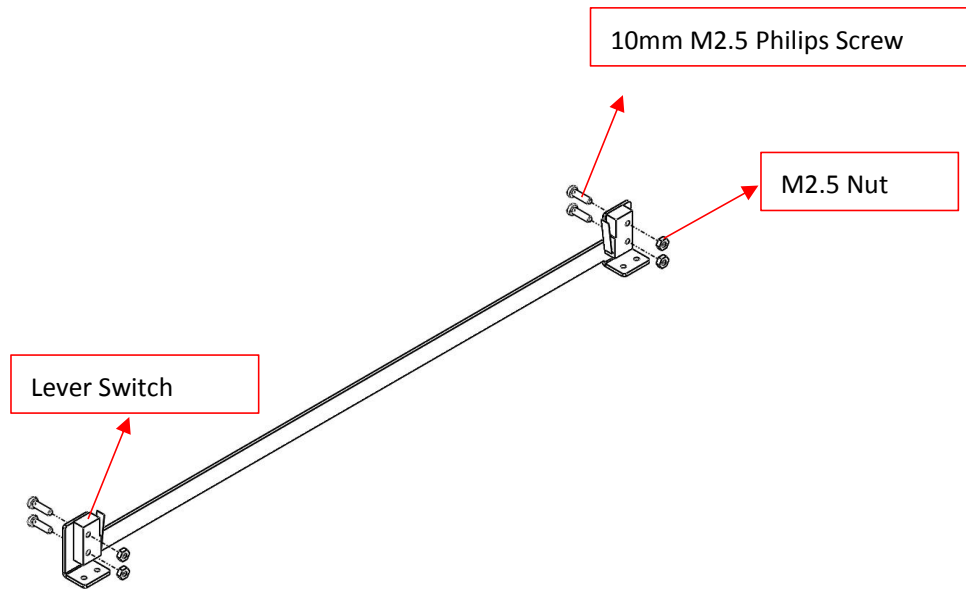


5、

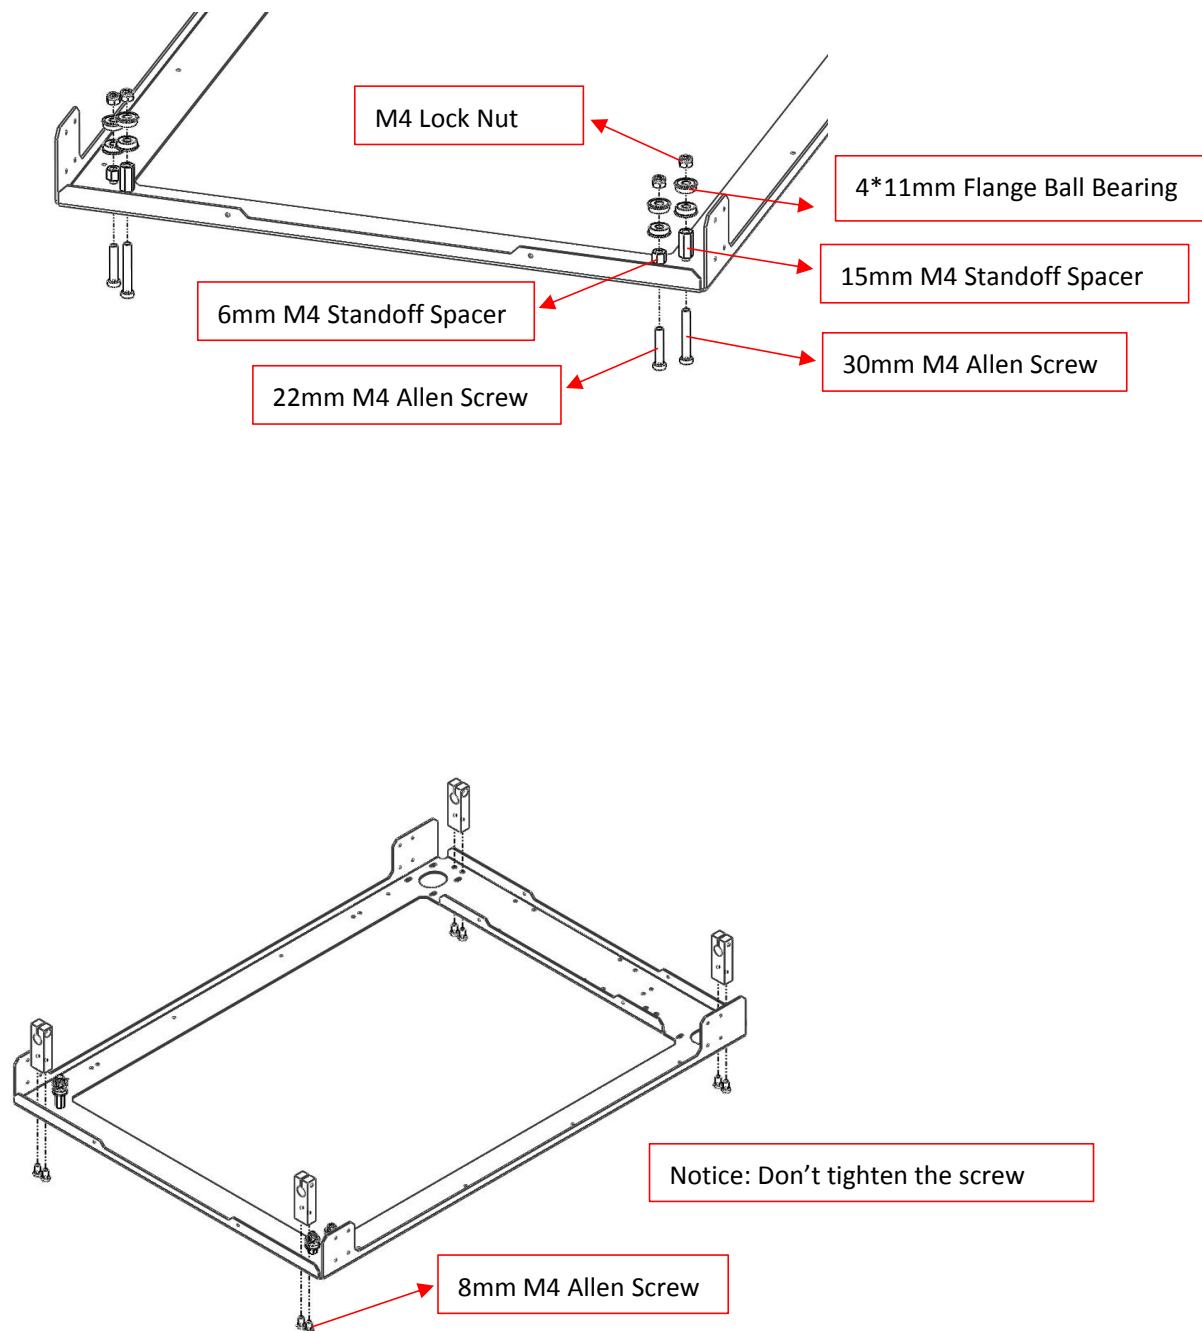

6、

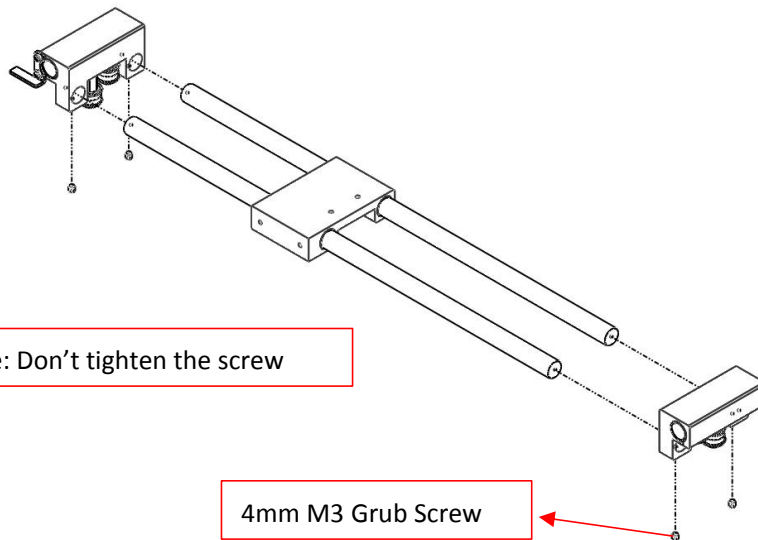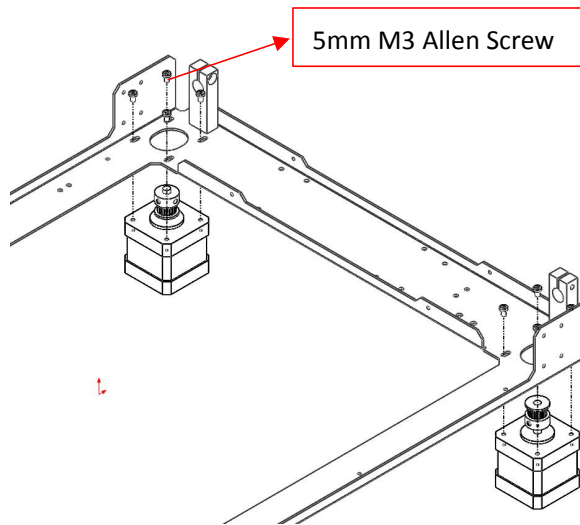


7、

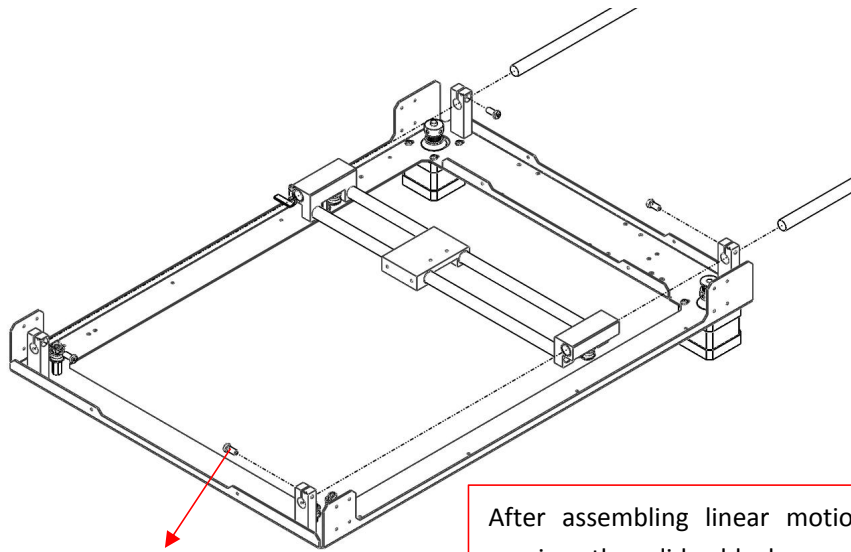



10mm M4 Allen Screw
(Don't tighten the screw)

After assembling linear motion rods. Adjust rods by moving the slide block round until the movement become smooth. Then tighten all the screws.

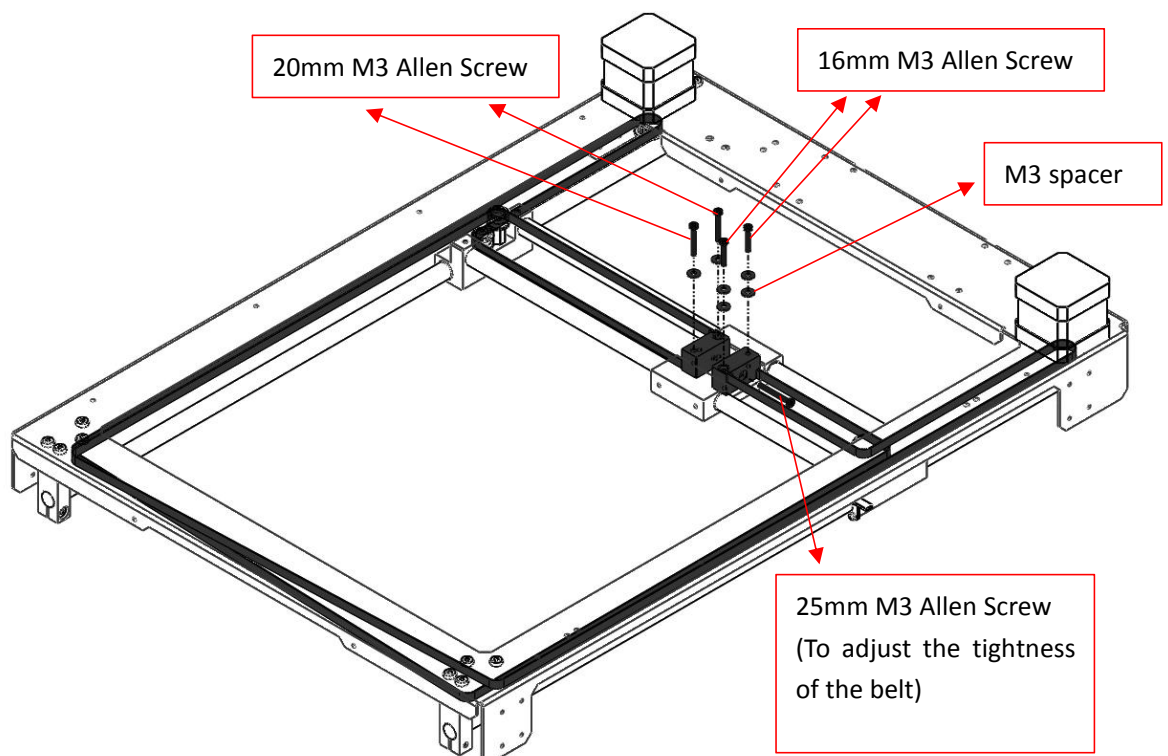


Notice: Please make sure the tightness of two belts are the same.



8、

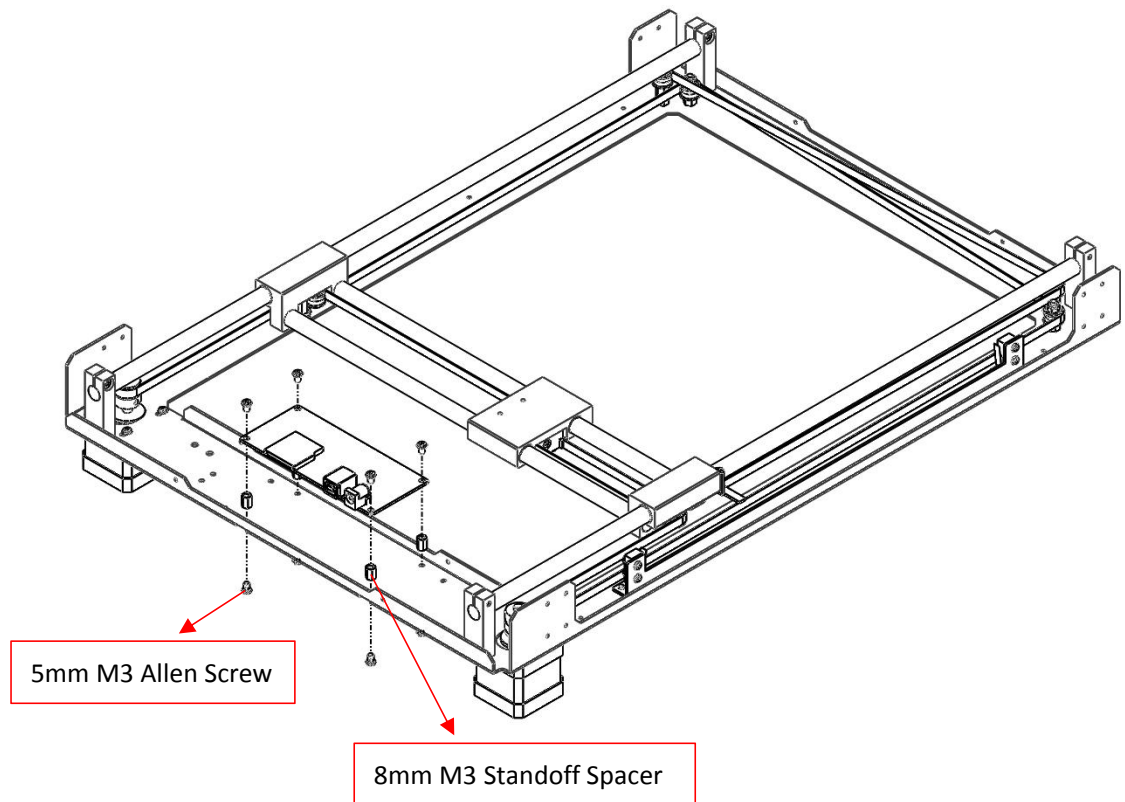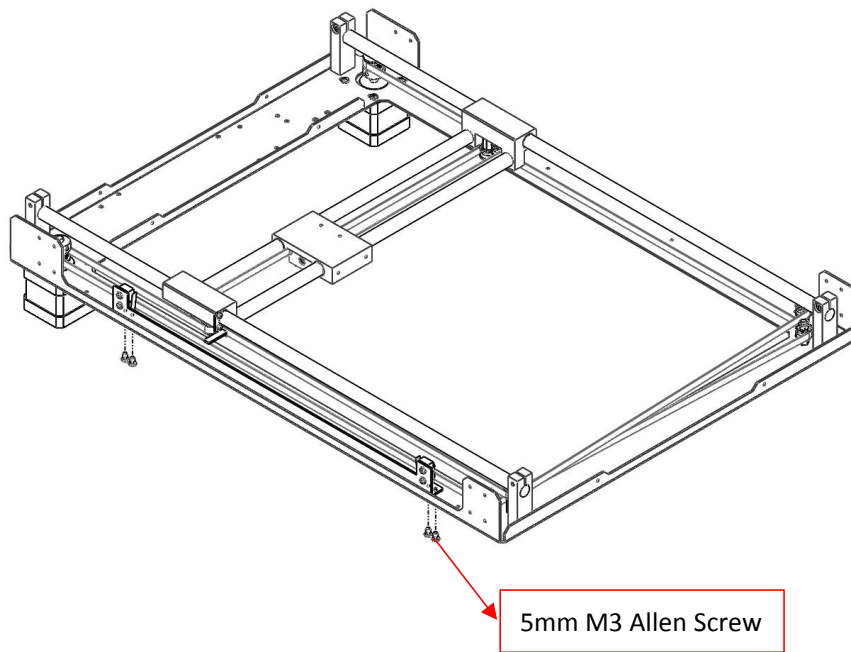



9、

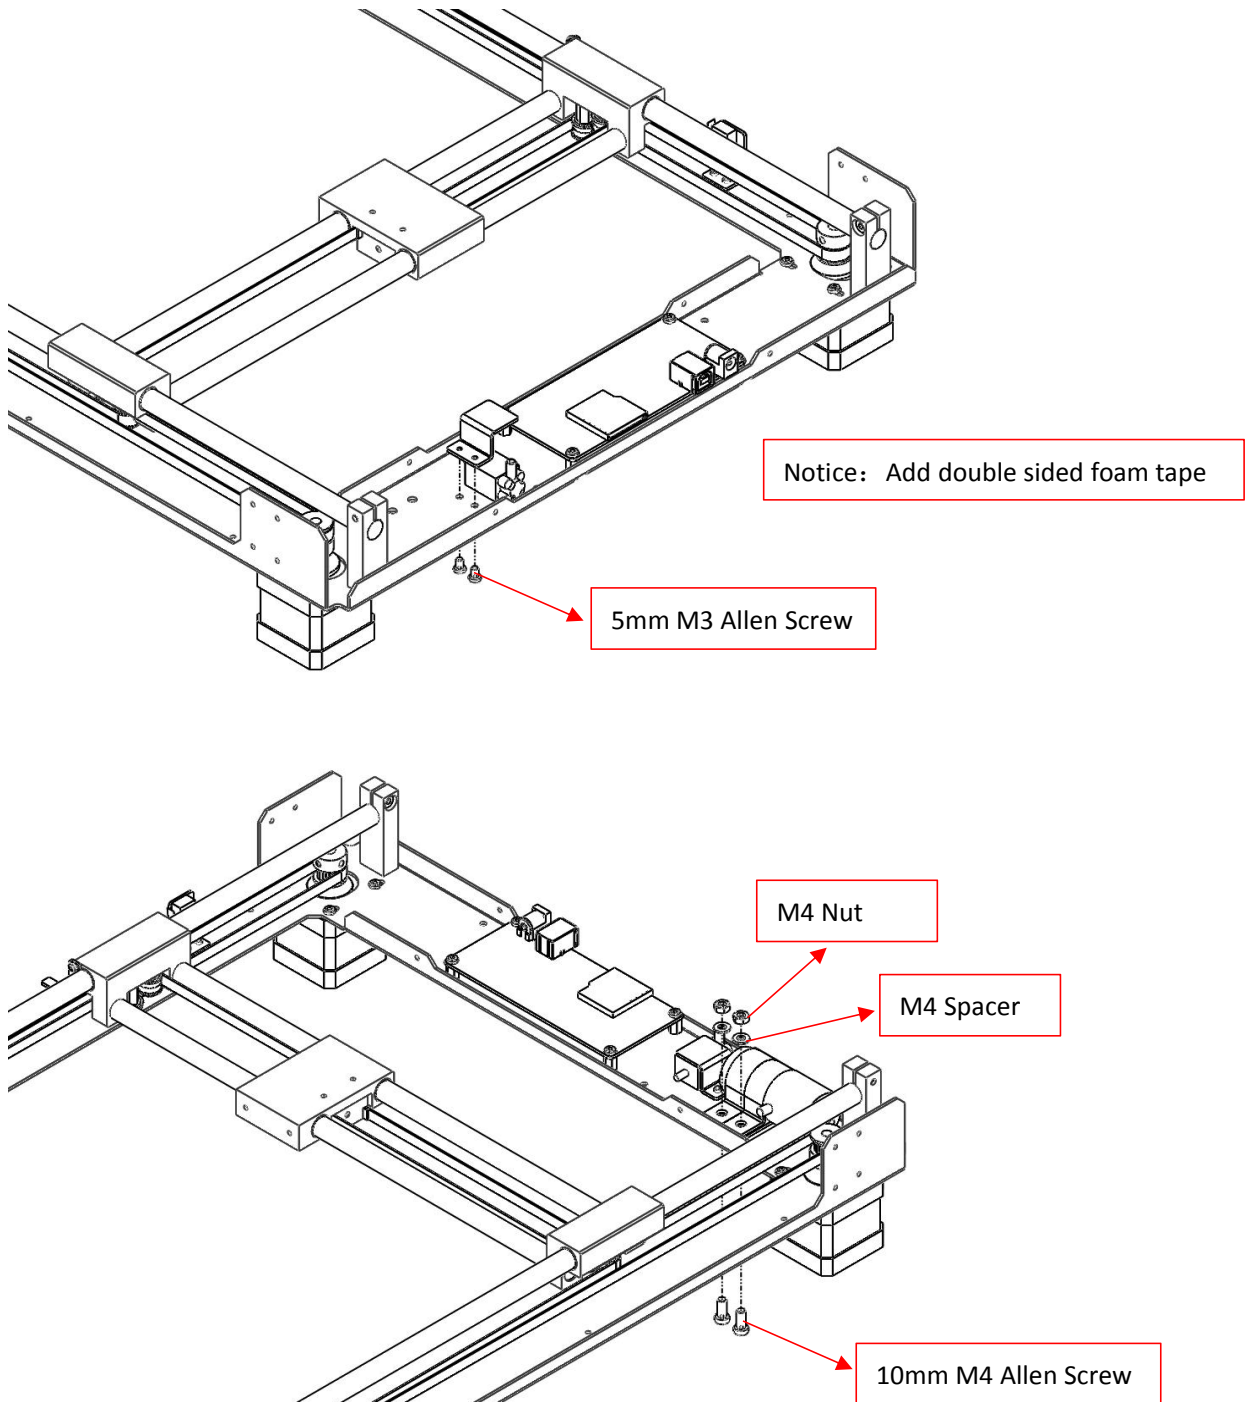

10、

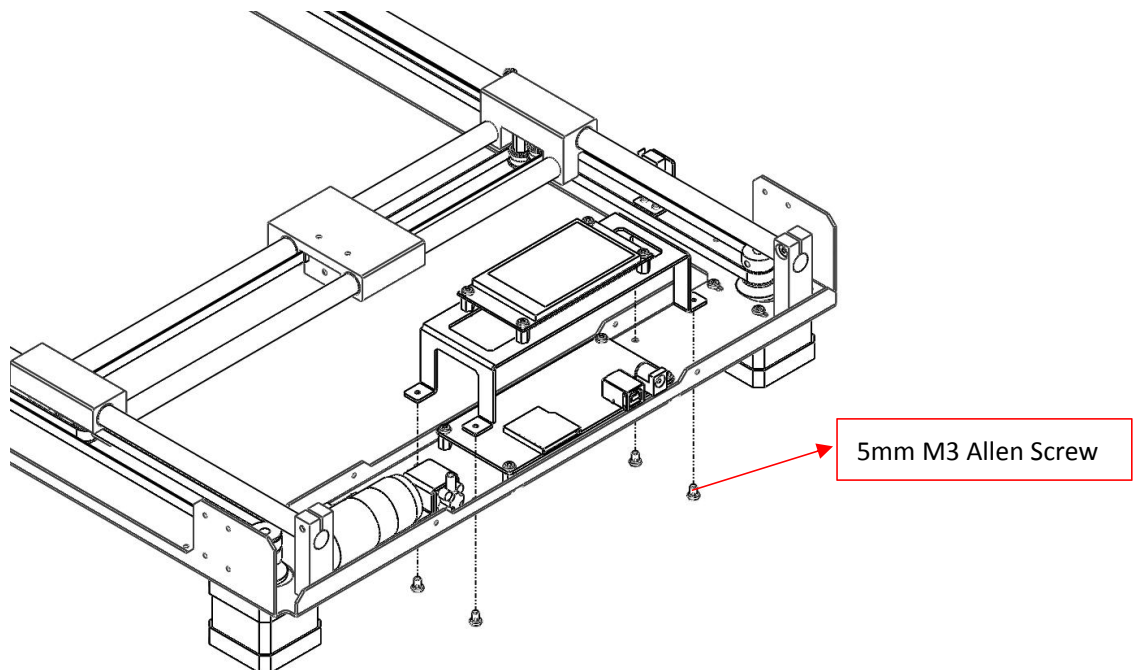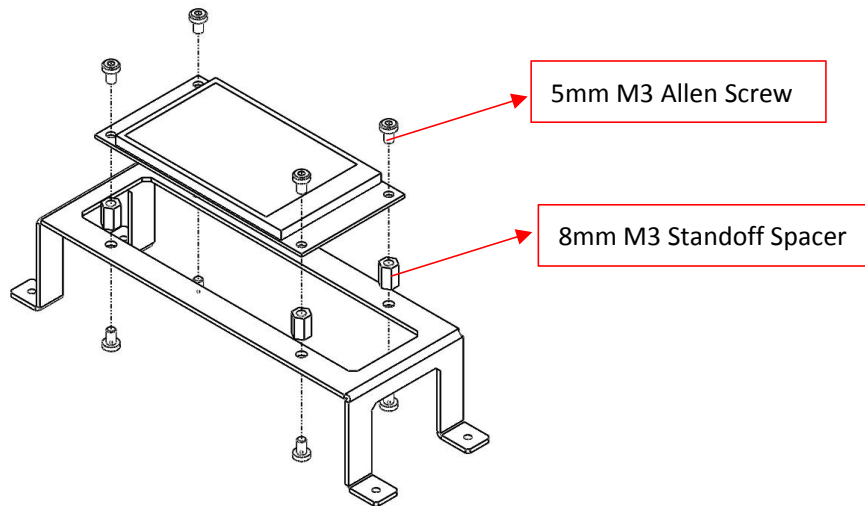


11、

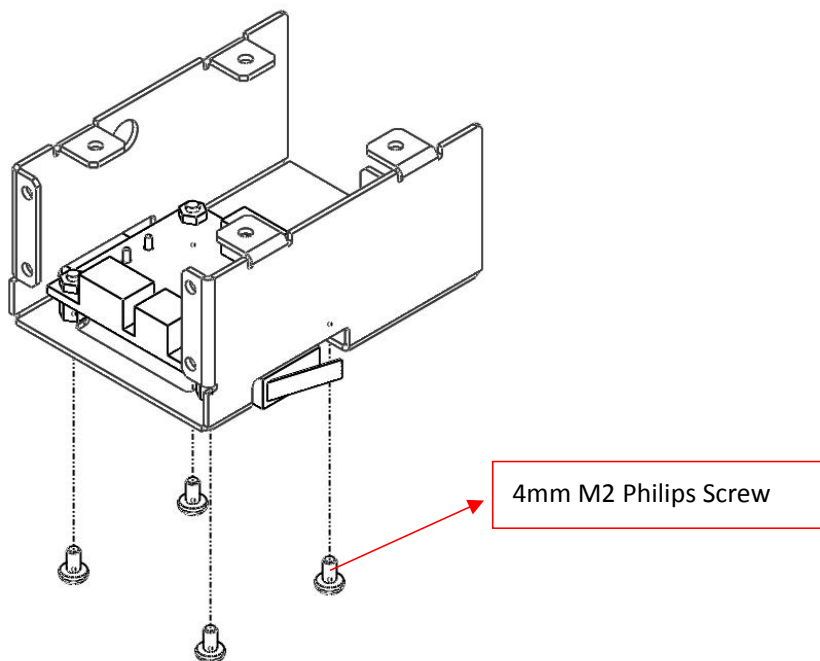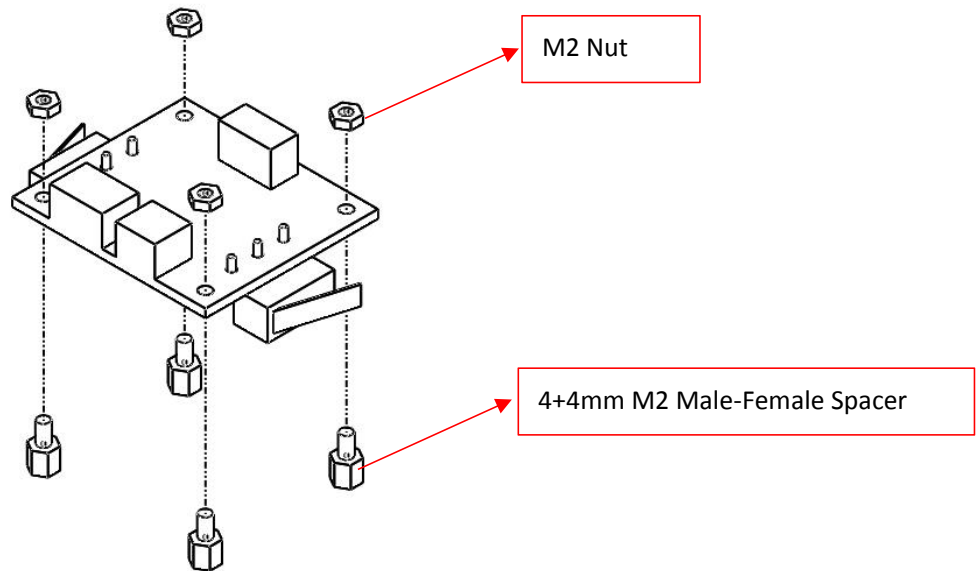



12、

5mm M2 Allen Screw

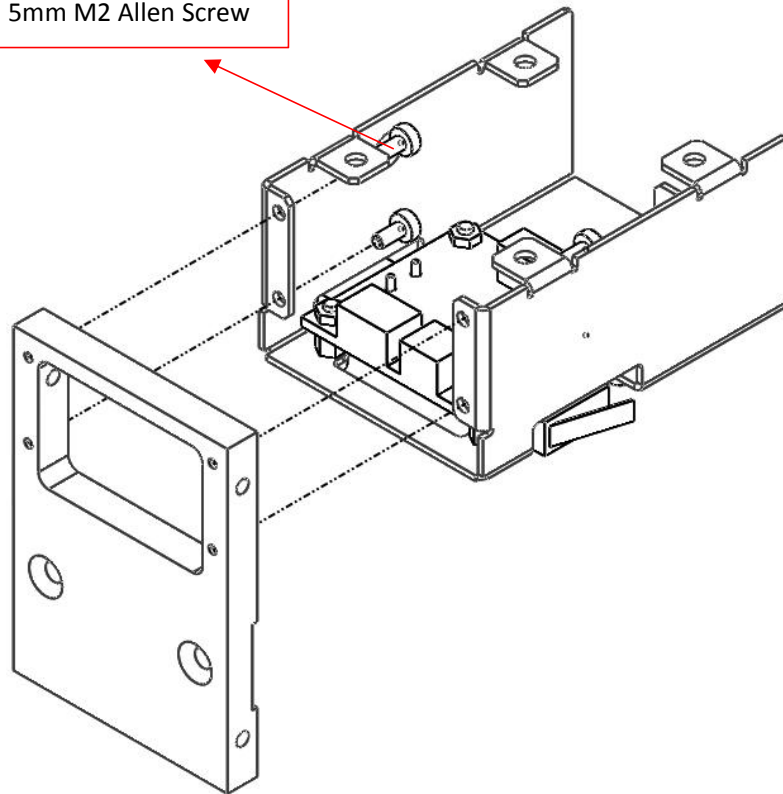


Air Tube Connector

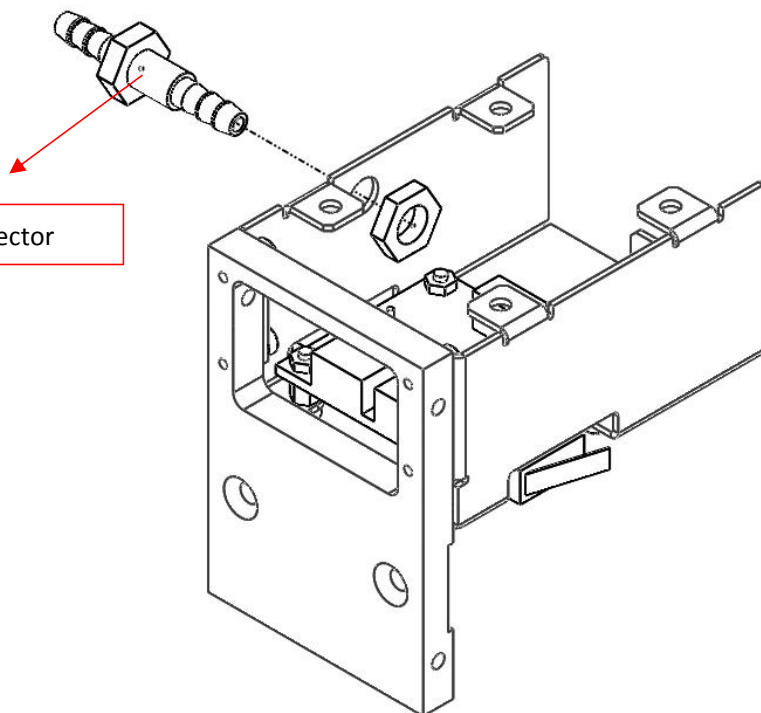


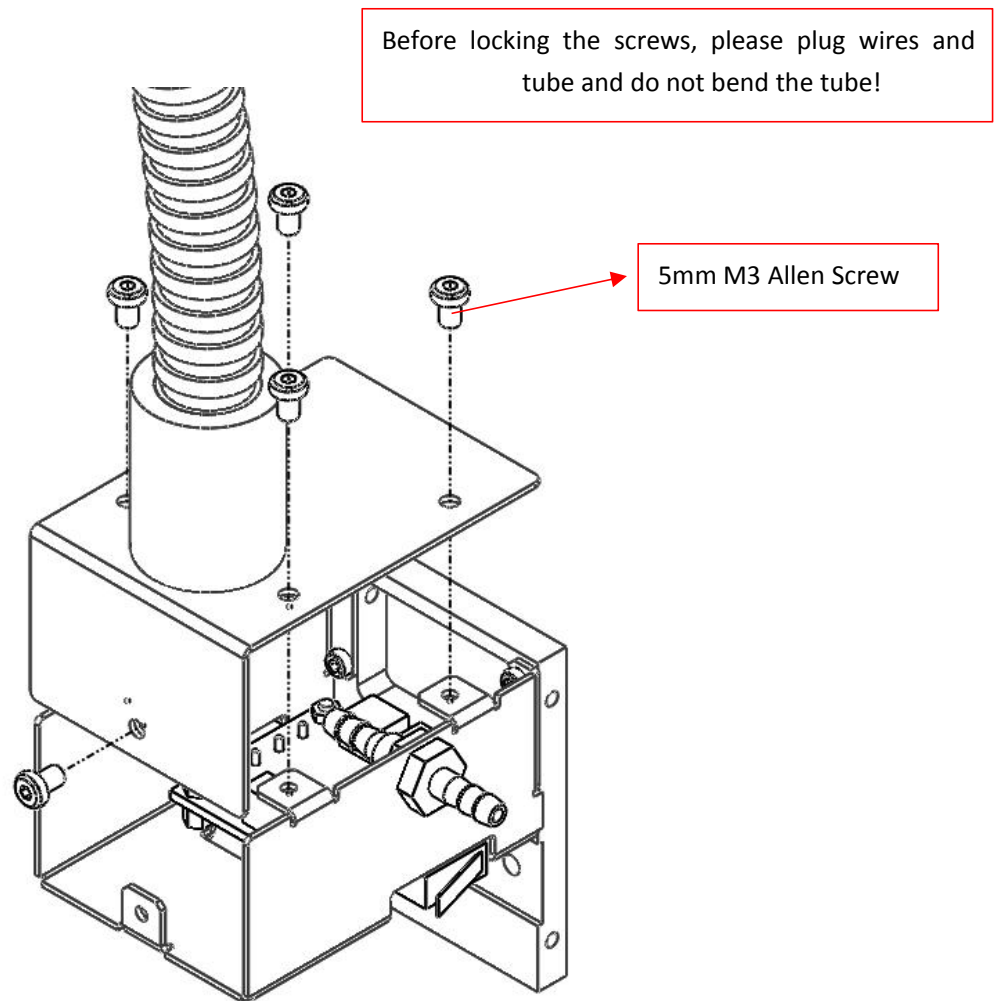

14、


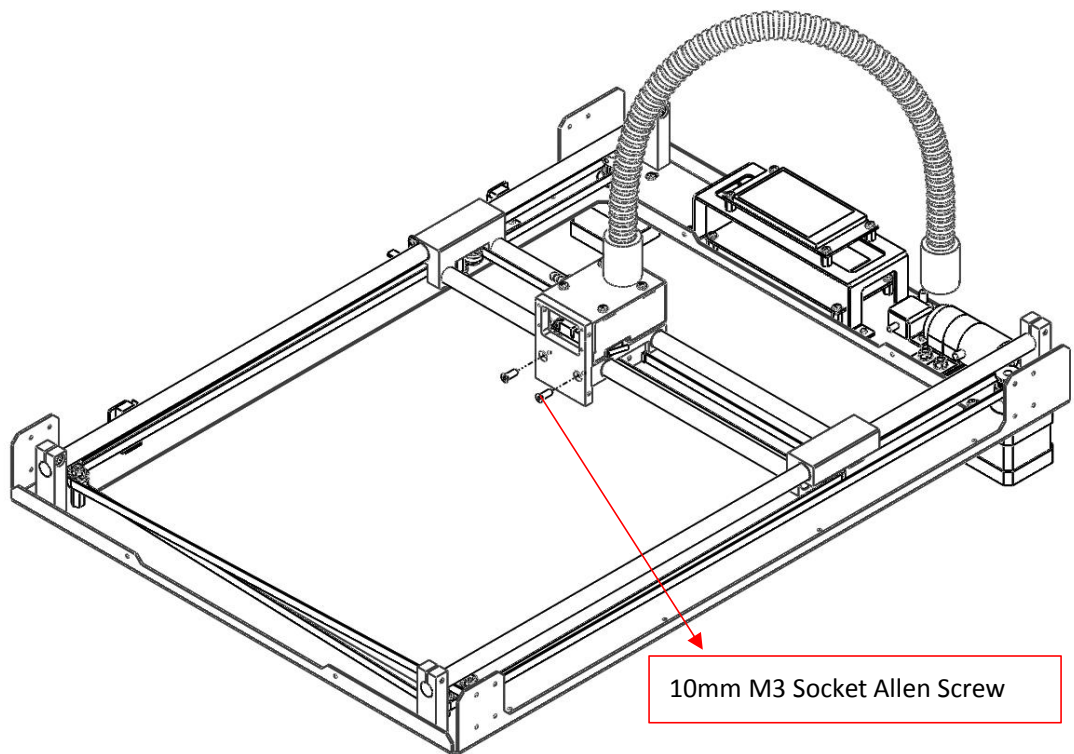


15、


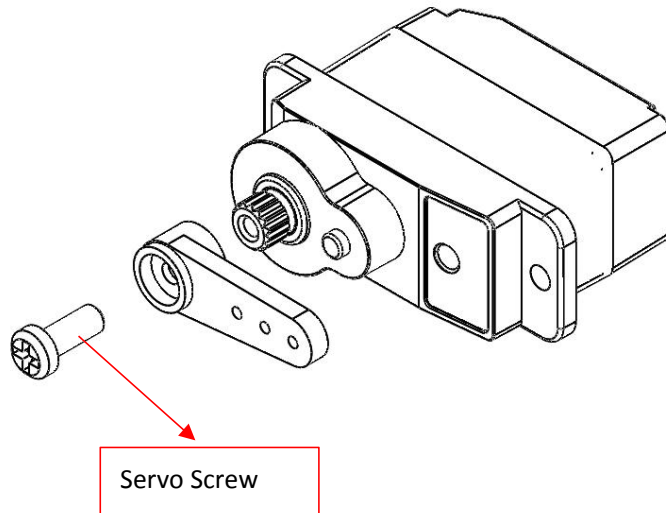


Adjust servo to 90 degree before assembly.


16、

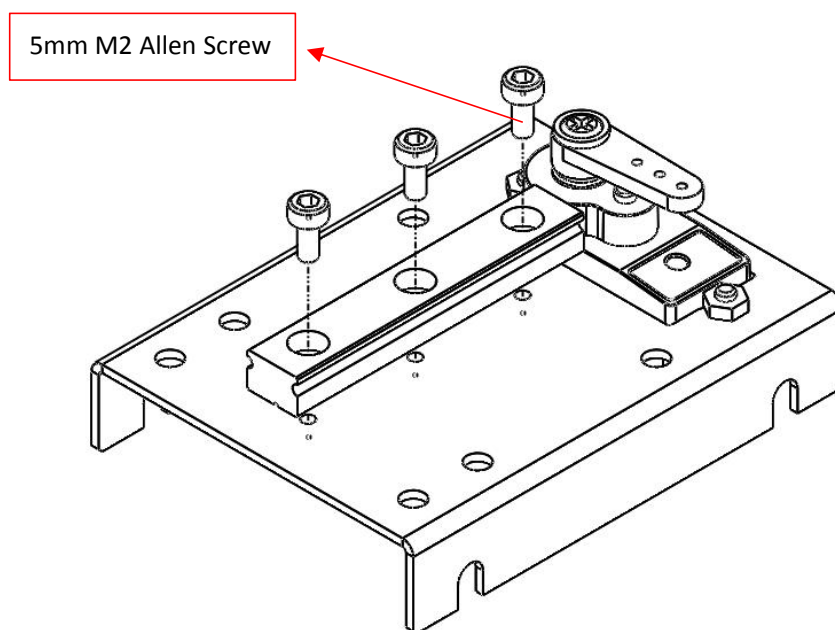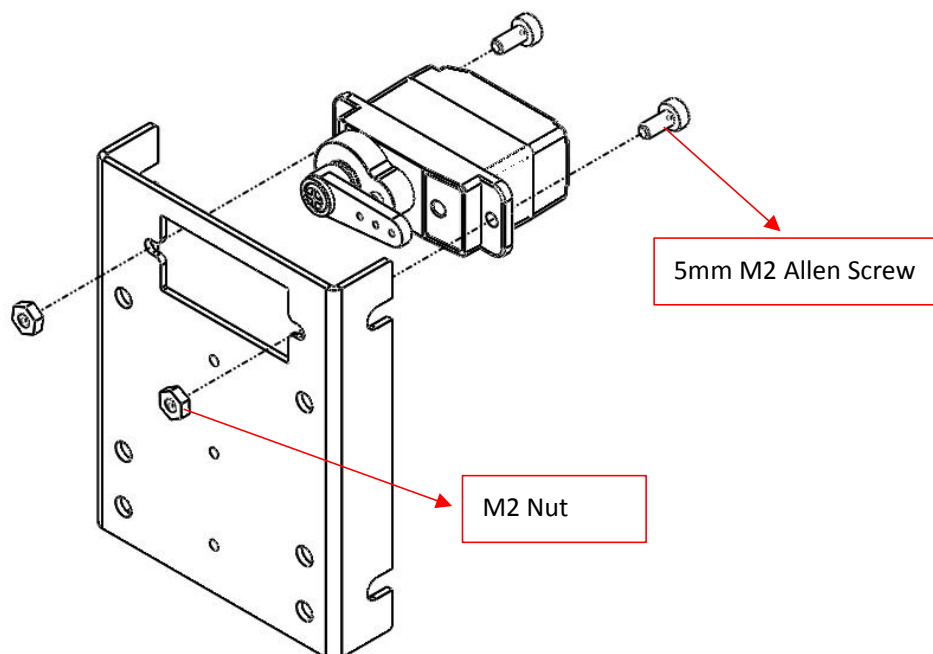


17、

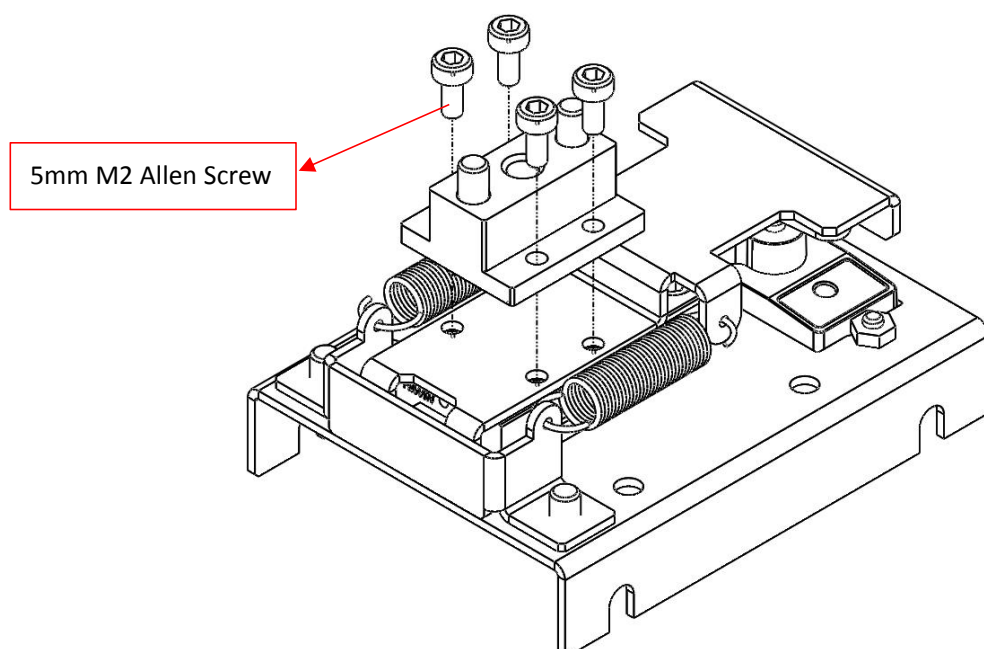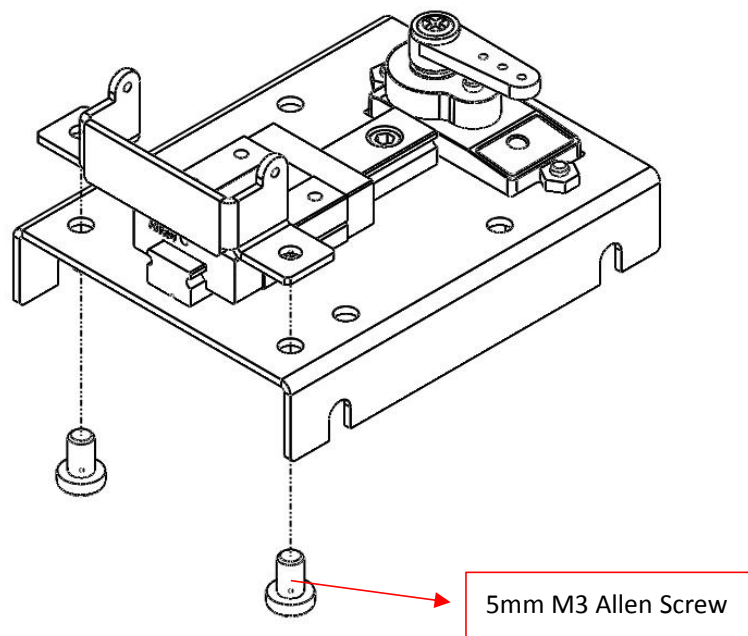


18、

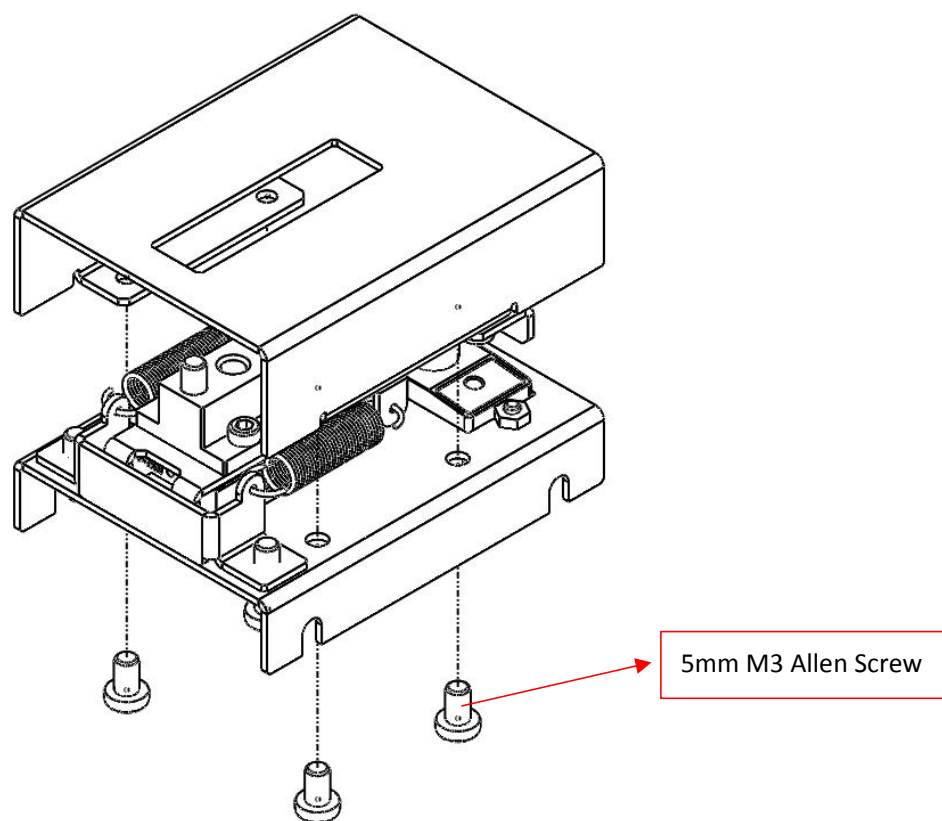


19、

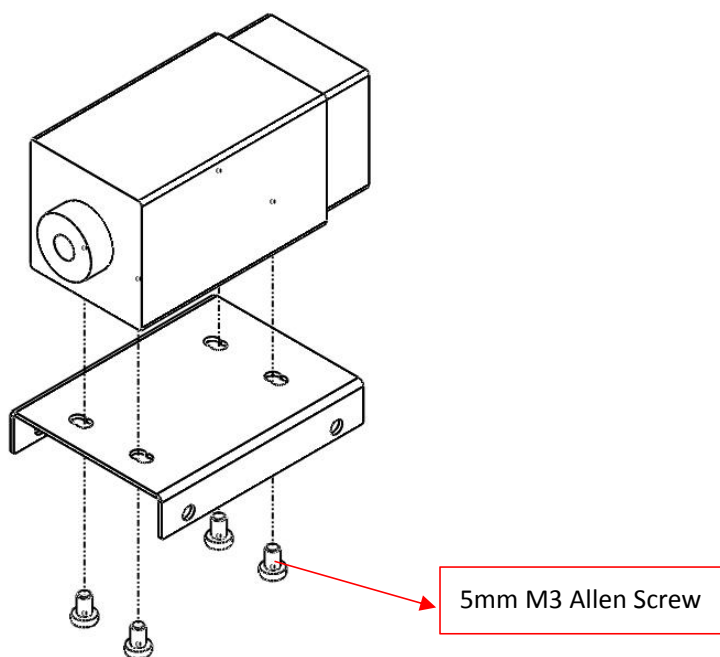

20、


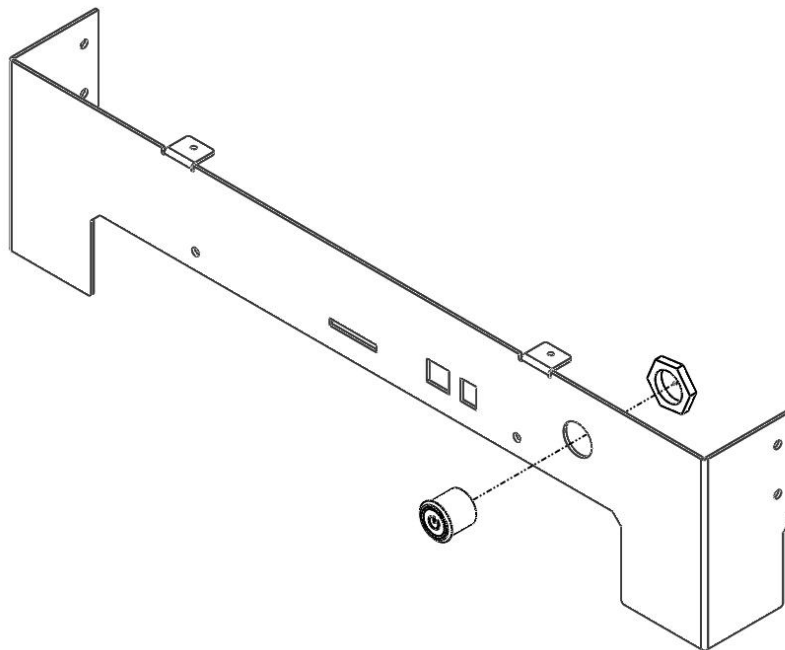


Assemble Housing

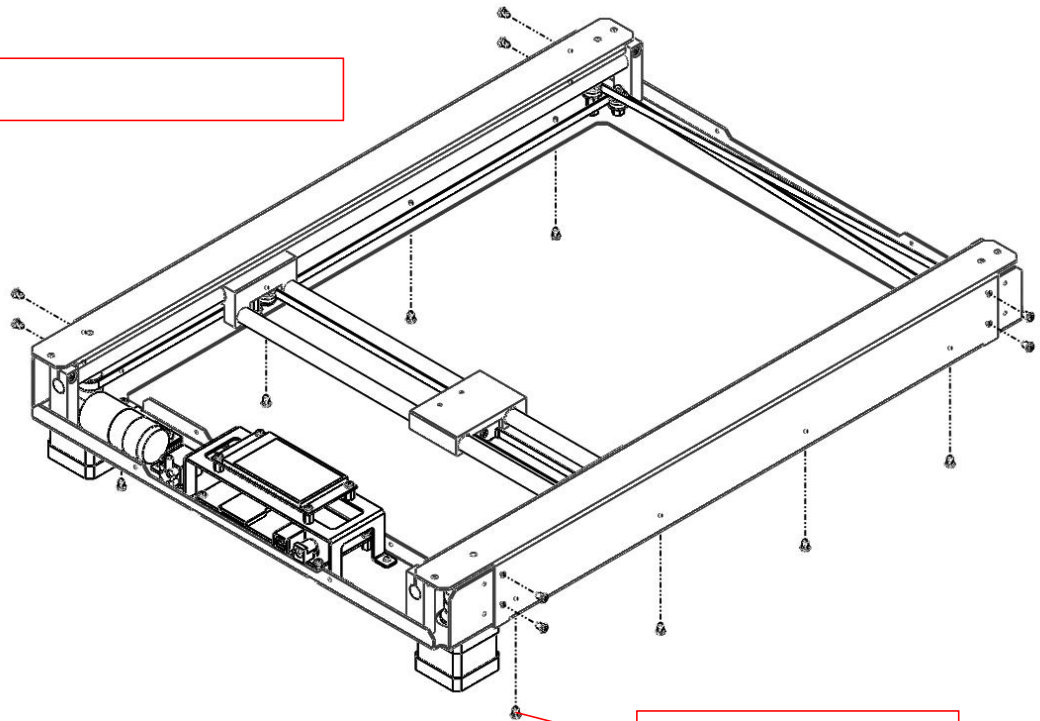

5mm M3 Allen Screw

21、

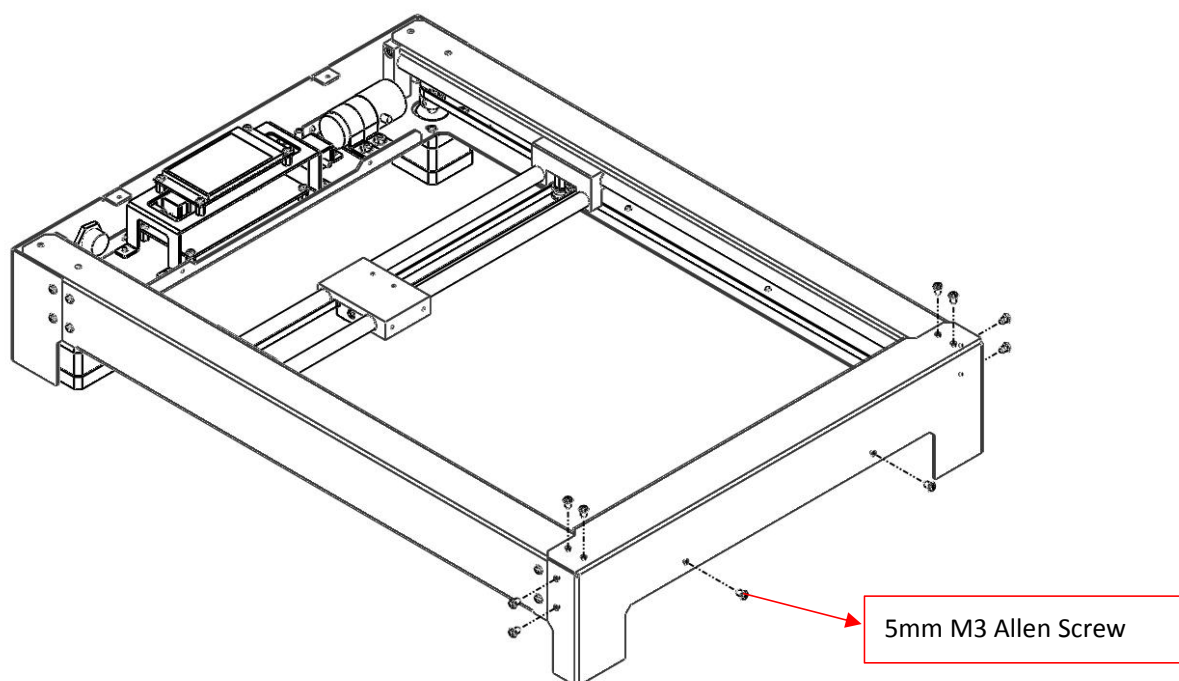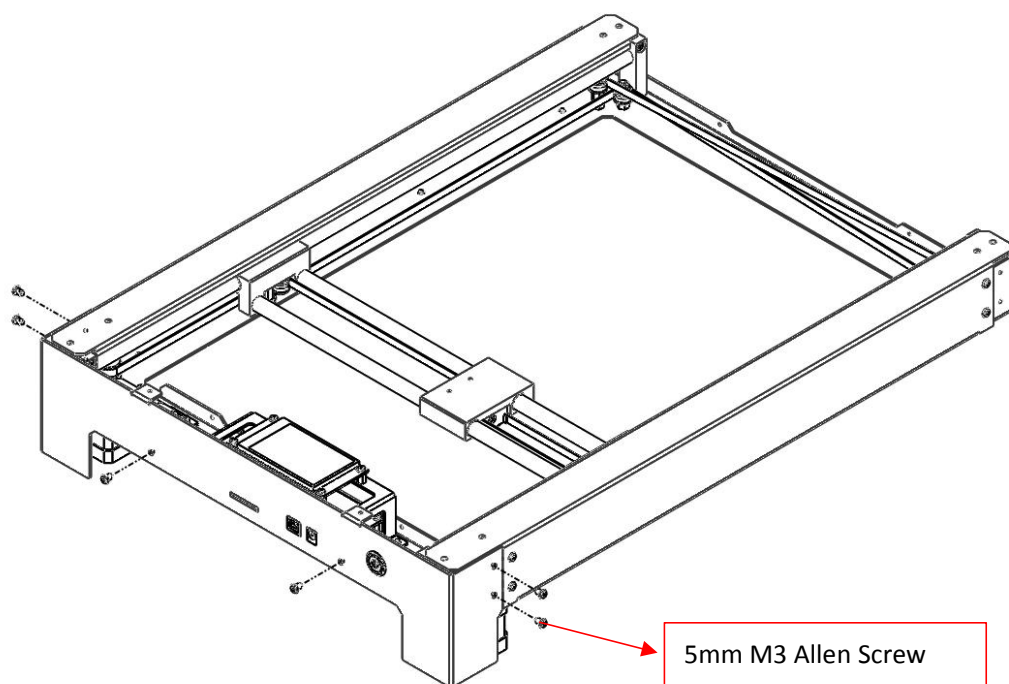

22、

